



- | | |
|-------------------------------------|----------------------------------|
| 1. EXTERNAL LIGHT SWITCHES (2) | 17. RUDDER PEDAL ADJUST (2) |
| 2. RIGHT ICE CONTROL PANEL | 18. GUST LOCK CONTROL |
| 3. PANEL LIGHT RHEOSTATS | 19. ELEVATOR TRIM TAB WHEELS (2) |
| 4. DC ELECTRICAL CONTROL PANEL | 20. ANTI-SKID CONTROL PANEL |
| 5. PILOT COMPARTMENT LIGHTING | 21. WING FLAP CONTROL SWITCH |
| 6. MISC. ELECTRONICS PANEL | 22. ADF CONTROL PANEL |
| 7. ENGINE CONTROL PANEL | 23. AILERON TRIM TAB KNOB |
| 8. AC ELECTRICAL CONTROL PANEL | 24. RUDDER TRIM TAB KNOB |
| 9. FUEL CONTROL PANEL | 25. ANNUNCIATOR PANEL |
| 10. LEFT ICE CONTROL PANEL | 26. LANDING GEAR HANDLE |
| 11. VOICE RECORDER MICROPHONE PANEL | 27. F/O'S SIDE CONSOLE |
| 12. FIRE CONTROL PANEL | 28. F/O'S FLIGHT INSTRUMENTS |
| 13. PARKING BRAKE HANDLE | 29. ENGINE INSTRUMENTS |
| 14. EMERGENCY AIR BRAKE CONTROL | 30. CAPT'S. FLIGHT INSTRUMENTS |
| 15. NOSEWHEEL STEERING | 31. MASTER WARNING LIGHT |
| 16. CAPT'S. SIDE CONSOLE | 32. MAGNETIC COMPASS |
| | 33. GPWS WARNING LIGHT |

FIGURE 44 COCKPIT ARRANGEMENT (FORWARD)

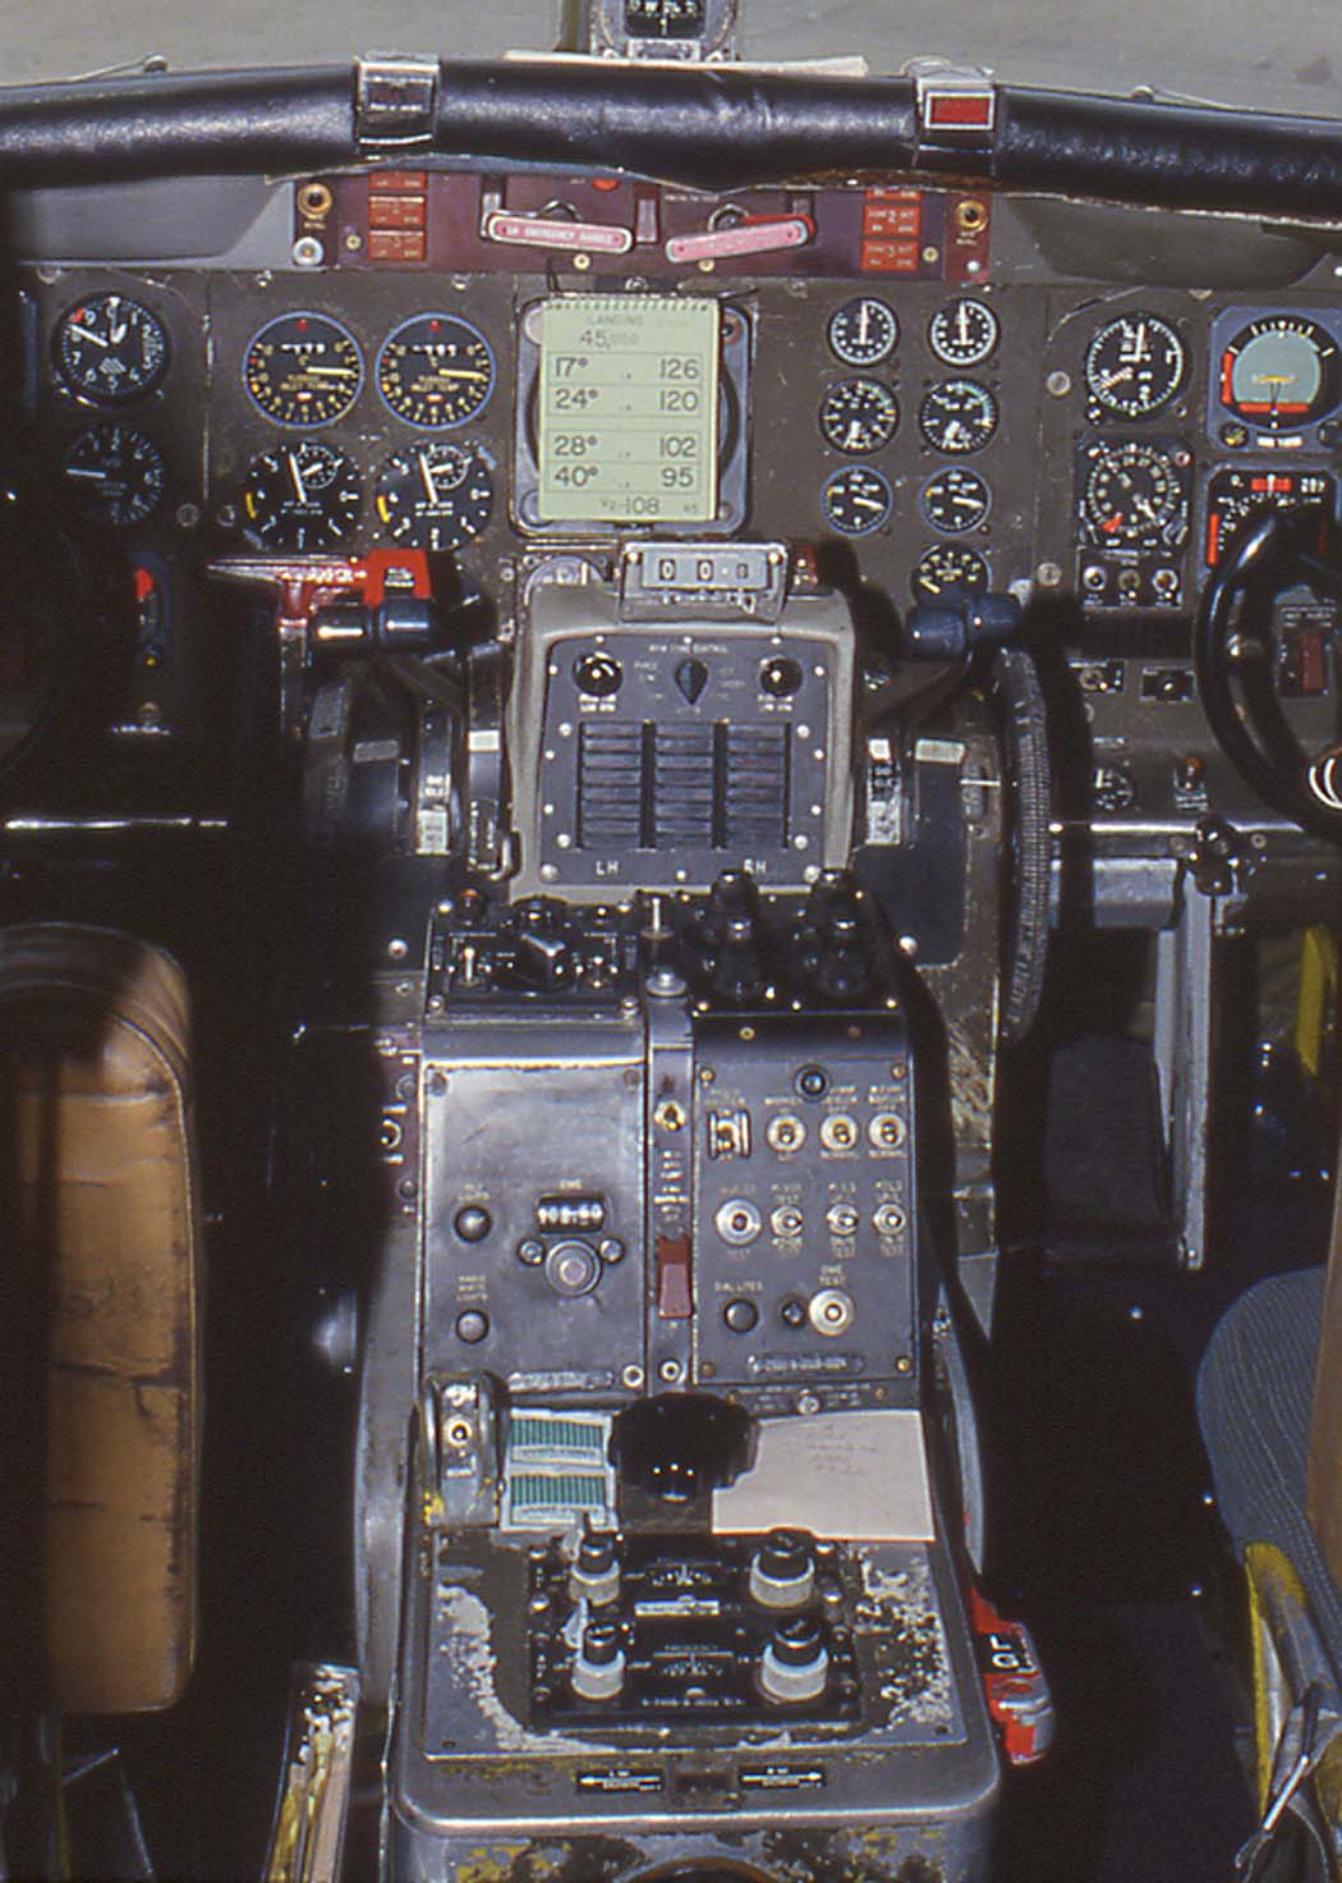

RPM SYNC CONTROL

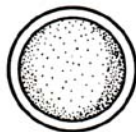

PUSH FOR
LOW RPM

PHASE
SYNC




OFF


SYNC

STANDBY
SYNC



CENTER

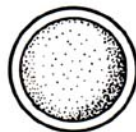

PUSH FOR
LOW RPM

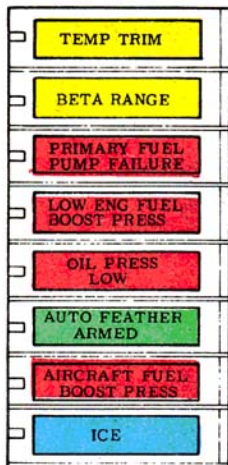


L H

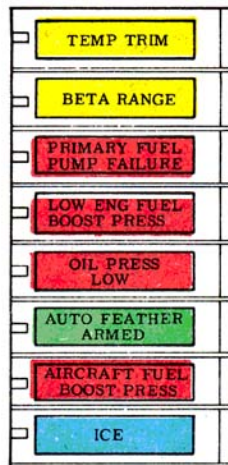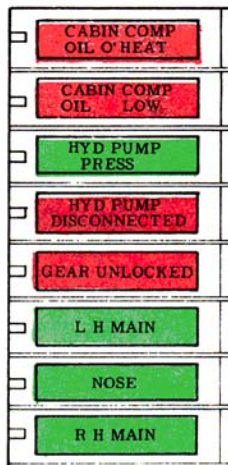


R H

FIGURE 4-11 MAIN ANNUNCIATOR PANEL

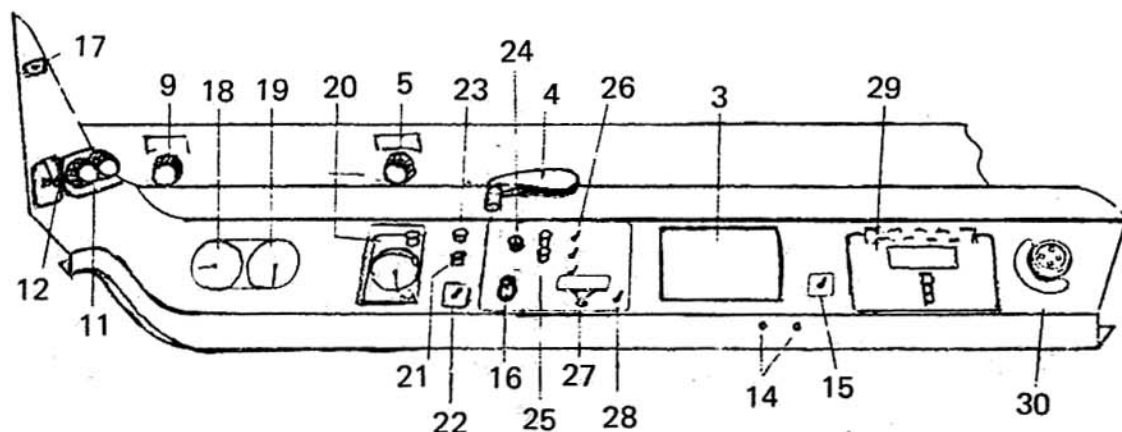


F/O'S CONSOLE

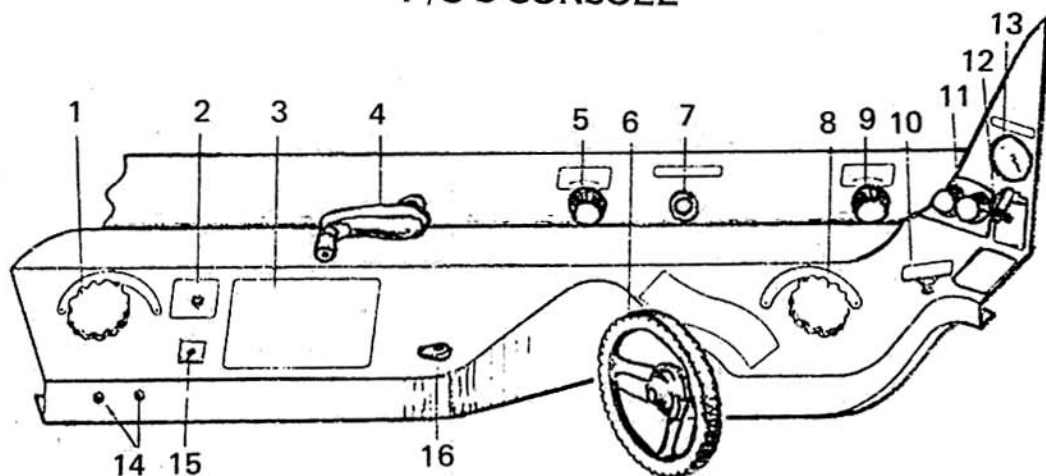

CAPTAIN'S CONSOLE

- | | |
|--------------------------------------|-----------------------------------|
| 1. EMERGENCY UPLATCH RELEASE | 16. OXYGEN OUTLET (2) |
| 2. HYDRAULIC RESERVOIR LIGHT SWITCH | 17. AURAL MACH WARNING TEST |
| 3. RADIO CONTROL PANEL (2) | 18. CABIN ALTIMETER |
| 4. SIDE WINDOW CRANK (2) | 19. CABIN RATE-OF-CHANGE |
| 5. SIDE CONSOLE LIGHT KNOB (2) | 20. CABIN ALTITUDE CONTROL PANEL |
| 6. NOSEWHEEL STEERING | 21. NITROGEN PRESS. LIGHT |
| 7. WINDSHIELD WIPER CONTROL | 22. STARTER ARMING SWITCH |
| 8. EMERGENCY AIR BRAKE | 23. FLIGHT RECORDER POWER LT |
| 9. FLIGHT DIRECTOR AC LIGHTS (4) | 24. PRESSURE CONTROL SELECTOR |
| 10. PARKING BRAKE | 25. AUX AC HEAT INDICATOR LTS (2) |
| 11. INSTRUMENT PANEL DC LIGHTS (4) | 26. AUX AC HEAT SWITCHES (4) |
| 12. STATIC SELECTOR (2) | 27. EMERG CABIN AIR DUMP HANDLE |
| 13. EMERGENCY BRAKE PRESSURE | 28. EMERG EDC DISCONNECT SWITCH |
| 14. MICROPHONE AND HEADSET JACKS (4) | 29. SPARE BULB STOWAGE |
| 15. SPEAKER SELECTOR SWITCH (2) | 30. PASS. OXYGEN SHUT-OFF VALVE |

FIGURE 4.6 SIDE CONSOLE ARRANGEMENT

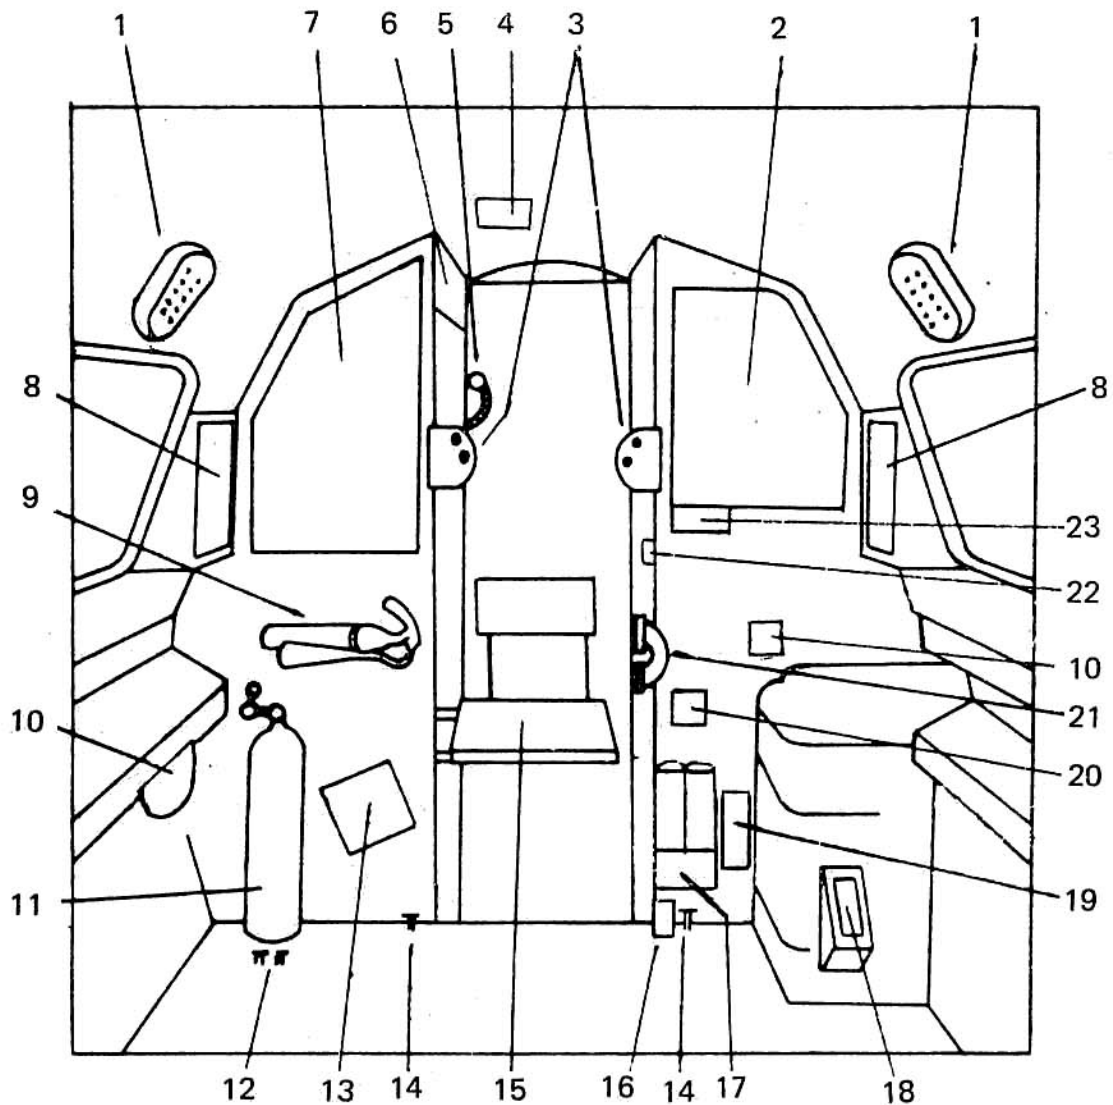

- | | |
|--------------------------------|------------------------------------|
| 1. COCKPIT SPEAKERS (2) | 12. GEN RESET "T" HANDLES (2) |
| 2. ESSENTIAL DC BUS C/B PANEL | 13. AIRCRAFT LOG BOOK |
| 3. OVERHEAD PANEL FLOOD LIGHTS | 14. DEFROSTER "T" HANDLES (2) |
| 4. ANTI-ICE HEAT LIGHT PANEL | 15. OBSERVER'S JUMPSEAT |
| 5. UTILITY LIGHT | 16. MANUAL FLAP CONTROL |
| 6. APU GAGE PANEL | 17. RAIN REPELLENT VALVE & BOTTLES |
| 7. MAIN CIRCUIT BREAKER PANEL | 18. HYD RESERVOIR SIGHT GAGE |
| 8. SMOKE MASKS (2) | 19. GEAR PIN STORAGE POUCH |
| 9. CO2 FIRE EXTINGUISHER | 20. PITOT-STATIC SHUT-OFF VALVES |
| 10. COCKPIT ESCAPE ROPES (2) | 21. PA AND INTERPHONE HANDSET |
| 11. OXYGEN BOTTLE | 22. EMERGENCY RADIO SWITCH |
| | 23. MASTER SPIRIT LEVEL |

FIGURE 4-5 COCKPIT ARRANGEMENT (AFT)

CV-580 NORMAL VFR LANDING

